

## ID TECH UniMag Card Reader Setup Guide

## 1. Device volume

Before using the IDTECH UniMag reader, turn the Media Volume of your device up to maximum level:

Please refer to your smart phone's user manual for more information on adjusting your device's volume levels.



## 2. Plug in card reader

Insert the ID TECH UniMag card reader into you device's headphone jack as shown below:



## 3. Configure your card reader in AprivaPay

- When signed into AprivaPay, tap your device's MENU button, and then tap Settings.
- Under Card Reader, tap Enable.
- Under Card reader, tap No Card reader selected.
- Tap ID TECH UniMag.

	35 📶 🌌 12:30		12:33	👬 📶 🗹 12:34	
APRIVAPAY		Settings	Set	ttings	Settings
		General	General	· · / · / · / · / · / · / · / · · / ·	Paired Devices
Refund		Inactivity timeout	Inactivity time 15 minutes	eout 💿	Unpaired Devices Setup a new unpaired device
	>	Card Reader	Card Reader	Card Reader Use the Bluetooth settings screen to device and add it to the list above.	
More Options	>	Enable	Enable		Setup an undiscoverable dev
		ID TECH UniMag	No Card read	No Card reader selected details. Other Devices	
		Card reader timeout	Card reader to	imeout 💿	ID TECH UniMag
		Printer	Printer		
		Enable	Enable		
Ö	0	No printer selected Select or pair a printer.	No printer sel Select or pair a printer	lected <sup>r.</sup>	
Settings	About	Print test page	Print test page	e	