

ID TECH UniMag Card Reader Setup Guide

Plug the Unimag MSR into your iPhone

- Before launching AprivaPay, insert UniMag and turn up volume to maximum level (this is the headphone volume)
- Remove UniMag and turn down volume to lowest level (this is the speaker volume)
- Reinsert UniMag and launch AprivaPay



Configure your MSR in AprivaPay

When signed into AprivaPay, tap Settings at the bottom of the screen, and then tap Card Readers. Verify that Unimag Card Reader is selected with a check in the Connected Card Readers section. Tap AprivaPay to exit Settings.

APRIVAPAY	Hardware Settings	T	imeout Period	>		
Credit Sale	> Printers	> c	onnected Card Readers		Credit Sale	
S Refund	Card Readers	`	Inimag Card Reader	✓	Efund	
More Options	S General Settings	>			More Options	